


Contents - 2 Piece Set

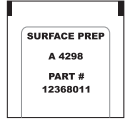


Surface Prep
Pad x2




Alcohol Pad x2



GP3 Clip
x2

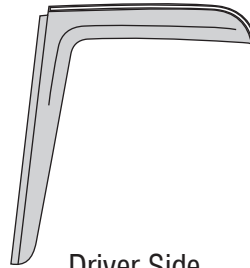

Driver Side
Visor

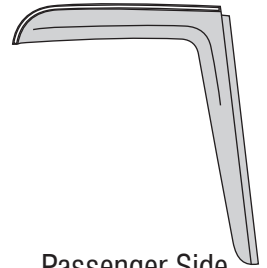


Passenger Side
Visor

Important



WARNING/CAUTION/NOTE

Please read this manual and follow instructions carefully. To emphasize special information, the symbol  and the words **WARNING**, **CAUTION** and **NOTE** have special meanings. These special meanings apply except when laws or regulations require that the signal words be used with a different meaning.

Preparation Before Painting / Installation

Ideal installation temperature is 65°-110°F (18°-43°C). A trial fit is recommended to ensure proper positioning and fit, since installing and then removing the Ventvisors will significantly degrade the adhesive performance of the tape. Please check fit of parts before painting as we will not accept the return of modified or painted parts, nor assume any responsibility for parts painted in error.

READ BEFORE USING SURFACE PREP

Avoid contact with skin and wear appropriate gloves when handling this material. Use in well-ventilated area with sufficient ventilation to disperse vapors from promotor. Avoid prolonged breathing of vapors. If contact is made with material, flush area with large amounts of water. If irritation persists, get immediate medical attention.
USE PREP ON RUBBER ONLY.

Care and Cleaning

1. Do not use cleaning solvents of any kind.
2. Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality items offered by Belmor. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

Alcohol Pad

Clean the window channel and vent post with an alcohol pad.



1

2

SURFACE PREP
A 4298
PART #
12368011

Apply Surface Prep to the inside of the window channel where shown.



Peel back 2" of tape line from each end end of the top flange (outward facing side of part).

3

4

Peel back 2" of tape line from each end end of the front flange (inward facing side of part).

Set visor in place. Top flange attaches inside the window channel. Front flange attaches to the vent post. If present, install front flange under rubber trim. Remove tape liners.

5

6

